

# EYEWASH ANYWHERE. READY IN SECONDS.



**15**  
MINUTE  
CONTINUOUS  
FLUSH

Item #91824

**NEW**

## 15 Minute Portable Eyewash Station

The self-contained, ANSI Z358.1-2014 compliant Portable Eyewash Station delivers a full 15 minute flush anywhere your team works. No plumbing or power needed. Fill it, mount it and it's ready.

### Key Features:

- ✓ **ANSI Z358.1-2014 Compliant:**  
Provides 15 minutes of continuous flushing to meet the standard.
- ✓ **Gravity Fed:**  
No plumbing or power needed, so it goes right where the hazard is.
- ✓ **High-Visibility Translucent Body:**  
Check the water level at a glance with no need to open the unit.
- ✓ **9 Gallon Capacity:**  
Compact, wall-mountable design fits tight work areas.
- ✓ **Simple Pull-Down Activation:**  
One easy motion starts the flow, even under stress.
- ✓ **Keep It Ready:**  
Add one bottle of Eyewash Additive Concentrate (Item #90496) with every fill.

### IDEAL LOCATIONS:



Anywhere Eye Hazards  
Exist

Be ready for chemical splashes, dust and debris anywhere on the job. The Portable Eyewash Station puts **15 minutes of protection right where you need it.**

# KEEP YOUR STATION READY TO GO.

Pair every 15 Minute Portable Eyewash Station with **Eyewash Additive Concentrate**




## Eyewash Additive Concentrate, 8 oz.

Item #90496

Stored water needs protection. Add one bottle with every fill to help keep the water in your portable eyewash station clean, fresh and ready for an emergency.


- ✓ **One Bottle Per Fill:**  
Treats 5 to 20 gallons, so one bottle covers a 9 gallon fill.
- ✓ **Clean and Odor-Free:**  
Keeps flushing water fresh for when it's needed.
- ✓ **Fights Bacteria:**  
Helps protect against bacteria growth in stored water.
- ✓ **Tamper Evident:**  
Breakaway seal shows if a bottle has been opened.

### ORDERING INFORMATION

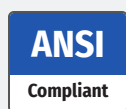

**91824**  
**Portable Eyewash Station**  
**9 Gallon, Gravity Fed**

17"H x 23.5"W x 10.5"D

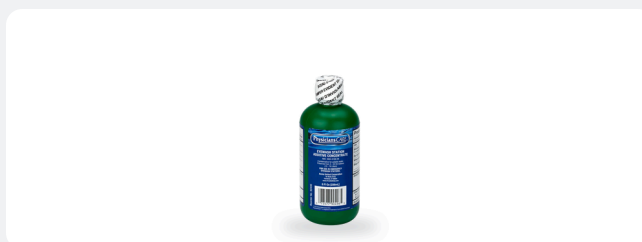

**90496**  
**Eyewash Additive Concentrate**  
**8 oz. Bottle**

5.63"H x 2.13"W x 2.13"D

### What ANSI Z358.1 Requires

Self-contained eyewash stations must meet the same core requirements as plumbed units.



**10 sec**

Maximum travel time from the hazard, about 55 feet



**15 min**

Minimum continuous flush



**0.4 GPM**

Minimum eyewash flow rate



**60 to 100°F**

Tepid flushing fluid

Be ready for chemical splashes, dust and debris anywhere on the job. The Portable Eyewash Station puts **15 minutes of protection right where you need it.**